


FIRMWARE UPDATE

Since the firmware update function only available in HTML5 web browser of PC platform, you need to use the PC to update the firmwares. Under the PC platform, the firmware update section will appear on the bottom side of the advance setting page.

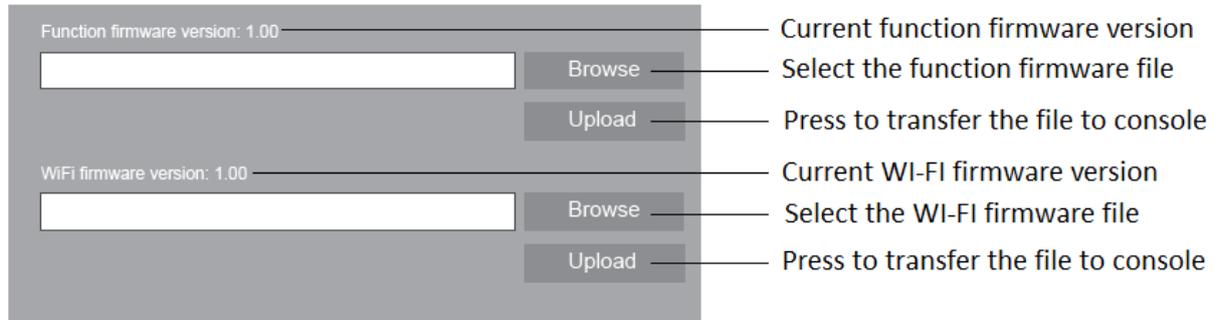


Please note:

- **Function and WI-FI firmware cannot update at the same time, you need to update one by one.**
- **Please keep connecting the power during the firmware update process.**
- **Please make sure your PC's WI-FI connection is stable.**
- **When the update process start, do not operate the PC and console.**
- **During firmware update the console will stop upload data. It will reconnect to your WI-FI router and upload the data again once the update success.**
- **If the console cannot connect to your router, please end the SETUP page to setup again.**


FIRMWARE UPDATE STEP

1. Please remove the backup battery from your weather station before the firmware update. You can use it again after the firmware update.
2. Download the latest firmware version (function or WI-FI)
3. First switch your base station to AP-mode via Wifi-Sensor.
4. Use your computer to connect to Wi-Fi.
5. In the system settings of the device, switch to W-LAN or WI-FI settings and select the wireless network (SSID) named 'PWS-XXXXXX'.
6. After successful connection via the address bar of the web browser, enter the IP address 'http: //192.168.1.1' to establish a connection to the settings menu of the weather station.
7. Select 'ADVANCED' to enter Advanced settings menu.
8. To update the function firmware, click the  in function firmware section and browse to the location of the file you download in step 2.

- Click the corresponding **Upload** to start transfer the firmware file to console, it will show the transfer percentage update under the file path.

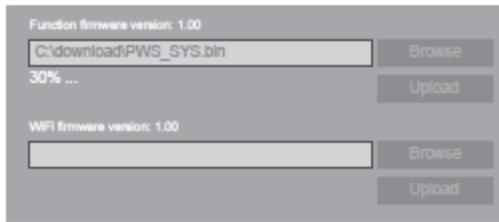

- Once the console received the firmware file, the console LCD will show the update progress on the LCD display (i.e. 100 is complete).

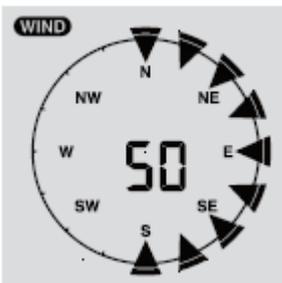

- To update the WI-FI firmware, click the **Browse** that in WIFI firmware section and browse to the location of the file you download in step 2.
- Click the corresponding **Upload** to start transfer the firmware file to console and you will see the progress of upload as in the steps before.
- The console will restart, once the update completed.
- Switch your base station to AP-mode again via Wifi-Sensor.
- Now you can control in advanced settings whether the firmware update was successful.

Function Firmware Version 1.03

WiFi Firmware Version 1.14

- Now you can enter and apply your setup settings as described in manual.